

Canon HD Camcorder Guide

1. Begin by turning on the camcorder by pressing the [on/off] button



2. Ensure that the [easy] button is lit up before recording, and that the dial selector is on the red movie camera icon.



3. Press the red [record button] to begin recording, then press it again to stop recording.



4. Use the [zoom slider] on the top of the camera to zoom in or out.



5. To access the recorded video, open the SD card slot.



6. Gently press on the SD card to pop it out.



7. Insert the SD card into a SD slot on your computer, or use the included adaptor



8. To access the files, go to CANON (it may be labeled as the E: drive) → PRIVATE → AVCHD → BDMV → STREAM. You will find your video files in this directory (they will be in the .mts file format).

